



AUTHORISED DEALER:

#### WRONG TRY PENALTY

- Entry of four (4) consecutive invalid codes starts a 5-minute delay period.
  - LED flashes red at ten (10) second intervals.
- At the end of the delay period, two more consecutive invalid codes will restart an additional 5-minute delay period.

#### CHANGING YOUR CODE

ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN

- 1 Enter "zero" six times.
  - 2 Enter your existing six (6) digit code one time.
  - 3 Enter your NEW six (6) digit code two times.
  - 4 If a mistake is made wait thirty (30) seconds and repeat steps 1 - 3.
  - 5 Test lock operation several times before closing door.
- Valid Code Entry - Double signal after valid six (6) digit code is entered.
  - Invalid Code Entry - Triple signal and old code is still valid.


#### BATTERY LOW WARNING

- Repeated beeping during an opening indicates that the battery is low and needs immediate replacement.
- Uses one (1) 9-Volt Alkaline Battery. LA GARD recommends the use of Duracell™ or Eveready™ Alkaline batteries. LA GARD recommends the replacement of batteries at least once annually.
- If battery is depleted and will not allow lock to open, simply follow instructions below. Lock contains a non-volatile memory, even with batteries removed the lock will retain all programming.

**WARNING:** The port for the eKEY II is a data port only. Connecting power to this port will damage the system.

#### CHANGING YOUR BATTERY

- 1 Remove black plastic battery compartment cover (located at the bottom of the keypad) by gently pulling downward on its handle.
  - 2 Allow the battery and its attached leads to drop down and out of the battery compartment. If it does not drop, gently pull on the battery until it drops out.
  - 3 The connector is easily removed by unsnapping it from the two terminals on the top of the battery.
- Never Pull on the Battery Leads
- 4 Connect a new 9-Volt Alkaline battery to the battery clip.
  - 5 Gently push the battery and the leads completely up into the battery compartment.
  - 6 Install the battery cover by placing one side of the cover in position first and then gently pressing the other side into place.

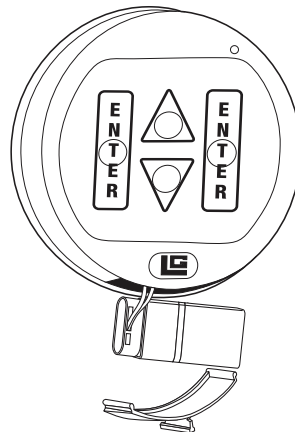


T: 1300 764 971  
 sales@safeguardgroup.com.au  
 www.safeguardsafes.com.au



# PRIVAT II

3190 Electronic Entry Device

## USER OPERATING INSTRUCTIONS

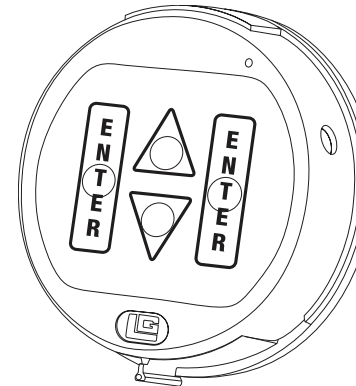

#### FEATURES

*Please see Manager Instructions for additional features that may be activated on your unit.*

#### USER CODE

- Open Lock
- Change Code

#### WRONG TRY PENALTY

- Four (4) consecutive invalid codes initiates five minute delay period.

#### LOW BATTERY WARNING

- Repeated audio and visual signal (LED flashing and repeated beeping) during opening indicates battery low.

#### AUDIO AND VISUAL SIGNAL

- Double signal (LED flashes and unit beeps) indicates entry is valid or accepted.
- Triple signal indicates invalid or not accepted.

Using the PRIVAT II entry does not change the way the lock features operate. The only difference, from a standard keypad, is in the way the digits are entered.

#### OPENING THE LOCK

To enter a combination using the PRIVAT II entry, first press either the up or down arrow key to wake up the lock. The LCD will display a random number.

- 1 Press the up arrow key to scroll forward numerically or the down arrow key to scroll backwards numerically until the LCD displays the first digit of the desired code.
  - 2 Press either of the enter keys to select this number at which time a beep will be heard indicating this number has been entered. After this number is entered the LCD will display another random number.
  - 3 Again use the arrow keys to scroll to the next digit of your code and enter the number using the enter key.
  - 4 Continue this procedure until all of the numbers of your code have been entered.
  - 5 The lock will signal a valid code entry with a double signal.
  - 6 Within four (4) seconds, either turn keypad to the open position (Clock-wise) if using a deadbolt style lock or turn the handle to the open position, if using a swingbolt style lock.
- 7 Pull door open.
  - Invalid Code Entry - Lock will signal three (3) times.